


APU Oil Servicing

General

APU oil service access is through the left APU access door. The APU is located in the forward lower section of the aft accessory compartment. The approved oil is Exxon Turbo-Oil 2380. APU should be shutdown to check oil level properly.

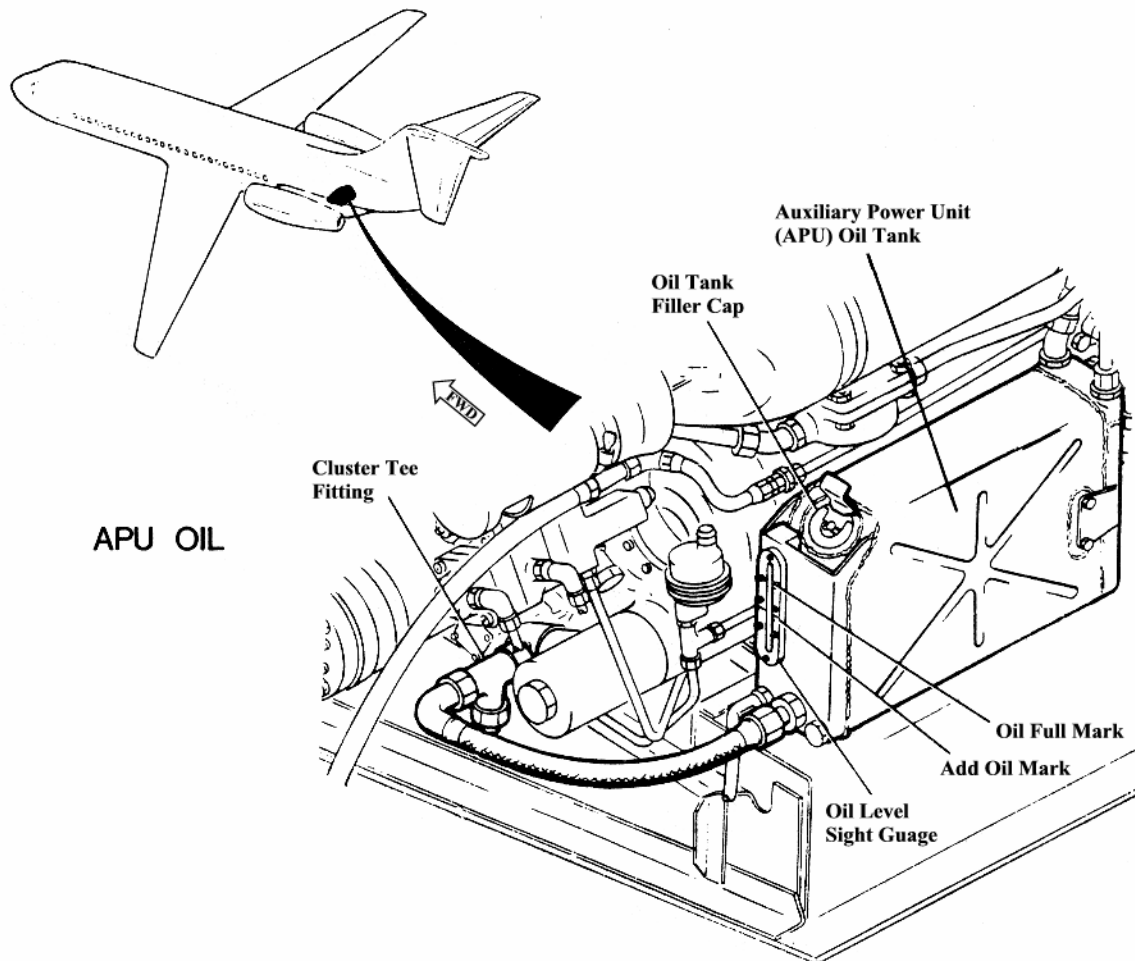

Checking and Filling Oil Tank

1. Open access. (left)
2. Check oil level on sight gauge.
3. If the APU needs servicing remove the oil tank filler cap.
4. Fill the oil tank to full mark on the sight gauge. Allow time for the oil level to drop as air is vented from the tank. Continue to add oil until oil level remains on full mark.

CAUTION: DO NOT OVERFILL APU OIL TANK.

NOTE: The quantity of oil required from the add oil mark to the full mark is approximately 1 U.S. quart.

CAUTION: MAKE CERTAIN FILLER CAP IS SECURE.